



Module Socket	5V PWD	5V TXD	BUSY	BR1	BR8	RECLED	+5V	GND	AN_IN	AN_OUT	GND	PWR	AUX	RESET	SP-	SP+
Amplifier Socket (for reference only)	1	2	3	4	5	6	7	8	10	11	12	13	14	15	16	
				SP- (0V/0V3)	SP+	+5V	GND	AUX_IN	MAIN_IN	GND	PWR	N.C.				

Title			QV306 Module Programmer		
Size	Number				Rev
C					1.1
Date	04/12/00		Drawn by		
Filename	QV306P.SCH		Sheet of		